HUMAN CREMATORY RECEIVED AIR GENERAL PERMIT REGISTRATION FORM

Part II. Notification to Permitting Office

ISEP 17 2009

(Detach and submit to appropriate permitting office; keep copy onsite) eau of Air MOHITORING & Mobile Sources

Instructions: To give notice to the Department of an eligible facility's intent to use this air general permit, the owner or operator of the facility must detach and complete this part of the Air General Permit Registration Form and submit it to the appropriate Department of Environmental Protection or local air pollution control program office which has permitting authority. Please type or print clearly all information, and enclose the appropriate air general permit registration processing fee pursuant to Rule 62-4.050(4)(0), F.A.C. (\$100 as of the effective date of this form)

Registration Type	610
Check one:	, and the second
 INITIAL REGISTRATION - Notification of intent to: Construct and operate a proposed new facility. Operate an existing facility not currently using an air general permit (e.g., a facility pro air operation permit to an air general permit). 	oposing to go from an
RE-REGISTRATION (for facilities currently using an air general permit) - Notification of Continue operating the facility after expiration of the current term of air general permit Continue operating the facility after a change of ownership. Make an equipment change requiring re-registration pursuant to Rule 62-210.310(2)(e) other change not considered an administrative correction under Rule 62-210.310(2)(d),	t use.), F.A.C., or any
Surrender of Existing Air Operation Permit(s) - For Initial Registrations Only	
If the facility currently holds one or more air operation permits, such permit(s) must be surrer or operator upon the effective date of this air general permit. In such case, check the first box operation permits being surrendered. If no air operation permits are held by the facility, check	k, and indicate the
All existing air operation permits for this facility are hereby surrendered upon the effect general permit; specifically permit number(s):	tive date of this air
No air operation permits currently exist for this facility.	
General Facility Information	
Facility Owner/Company Name (Name of corporation, agency, or individual owner who or w	which owns, leases,
operates, controls, or supervises the facility.) Trahan Mortuary Services, Inc. dba "Pensacola Crematory"	
Site Name (Name, if any, of the facility site; e.g., Plant A, Metropolis Plant, etc. If more than owned, a registration form must be completed for each.) Beverly Parkway Facility	n one facility is
Facility Location (Provide the physical location of the facility, not necessarily the mailing ad	dress.)
Street Address: 430 Beverly Parkway City: Pensacola County: Escambia Zip Code: 32	2505
Facility Start-Up Date (Estimated start-up date of proposed new facility.) (N/A for existing fa	acility)

DEP Form No. 62-210.920(2)(c) Effective: January 10, 2007

	ho, by signing this form below, cer	tifies that the facility is eligible to use this
air general permit.)	shan Owner	
Print Name and Title: Dennis Tra	anan, Owner	
Owner/Authorized Representative	Mailing Address	
Organization/Firm:Pensacola C		
Street Address:430 Beverly Parl		
City:Pensacola	County: Escambia	Zip Code: 32505
Owner/Authorized Representative	Telephone Numbers	
Telephone:850-438-6235		0-438-5758
Cell phone (optional):		
		, , , , , , , , , , , , , , , , , , ,
	m Owner/Authorized Representat	
		arding day-to-day operations at the facility.)
Print Name and Title:Same as al	bove	
Facility Contact Mailing Address		
Organization/Firm:		
Street Address:	6 4	7' 0.1.
City:	County:	Zip Code:
Facility Contact Telephone Number	arc	
Telephone:	Fax:	
Cell phone (optional):	I ax.	
Cen phone (optional).		
<u> </u>		
Owner/Authorized Representati	ve Statement	
		s owner or authorized representative
	•	-
	ner or authorized representative of t	
	Permit Registration Form. I hereby	
		in this registration form is eligible for
		registration form are true, accurate
and complete. Further, I agre	e to operate and maintain the facili	ty described in this registration form so
		tant emissions found in the statutes of
the State of Florida and rules	of the Department of Environmenta	i Protection and revisions thereof.
I will my worth water at a Dog	mutus and of many abstraction to the information	vation contained in this posistuation
form.	arment of any changes to the inform	nation contained in this registration
101111.		


DEP Form No. 62-210.920(2)(c) Effective: January 10, 2007

Signature


9-10-09

Design Calculations
If this is an initial registration for a proposed new human crematory unit, provide design calculations to confirm sufficient volume in the secondary chamber combustion zone to provide for at least a 1.0 second gas residence time at 1800 degrees F.
Manufacturer's' design calculations attached.
Registration is not for proposed new human crematory unit(s).
Description of Facility
Below, or as an attachment to this form, provide a description of all crematory operations at the facility in sufficient detail to demonstrate the facility's eligibility for use of this air general permit and to provide a basis for tracking any future equipment or process changes at the facility. Describe all air pollutant-emitting processes are equipment at the facility, and identify any air pollution control measures or equipment used.
This registration is for installation of second human crematory. The new unit is a B&L System Inc. N20 Series, 150 lb/hr human crematory incinerator.
The new crematory is designed to burn human remains at the average incineration rate of 150 pounds per hour. The incinerator consists of primary and secondary (afterburner) chambers, each fired on LPG with a maximum total design heat input rate of 1.5 mmbtu/hr (0.5 mmbtu/hr, Primary chamber, 1.0 mmbtu/hr. Secondary chamber).
Emissions are controlled by the afterburner, which will maintain a minimum secondary chamb combustion zone temperature of 1600°F prior to and during combustion of material in the primary chamber. The secondary chamber is designed to ensure one second residence time a gas temperature of 1800°F, and is equipped with a continuous temperature monitor and recorder.
The unit is equipped with an opacity monitor that will adjust the cremation process if excess opacity is measured. Crematory and opacity monitor information is attached.
The existing unit is a B&L Cremations Systems, Inc. Phoenix II Series, 150 lb/hr human crematory incinerator designed to burn human remains at the average incineration rate of 150 pounds per hour. The unit consists of primary and secondary (afterburner) chambers, fired or LPG (propane) fuel with a maximum total design heat input rate of 2.0 mmbtu/hr.
Emissions are controlled by the afterburner, which will maintain a minimum secondary chamb combustion zone temperature of 1600°F prior to and during combustion of material in the primary chamber. The secondary chamber is designed to ensure one second residence time a gas temperature of 1800°F, and is equipped with a continuous temperature monitor and recorder.

DEP Form No. 62-210.920(2)(c) Effective: January 10, 2007

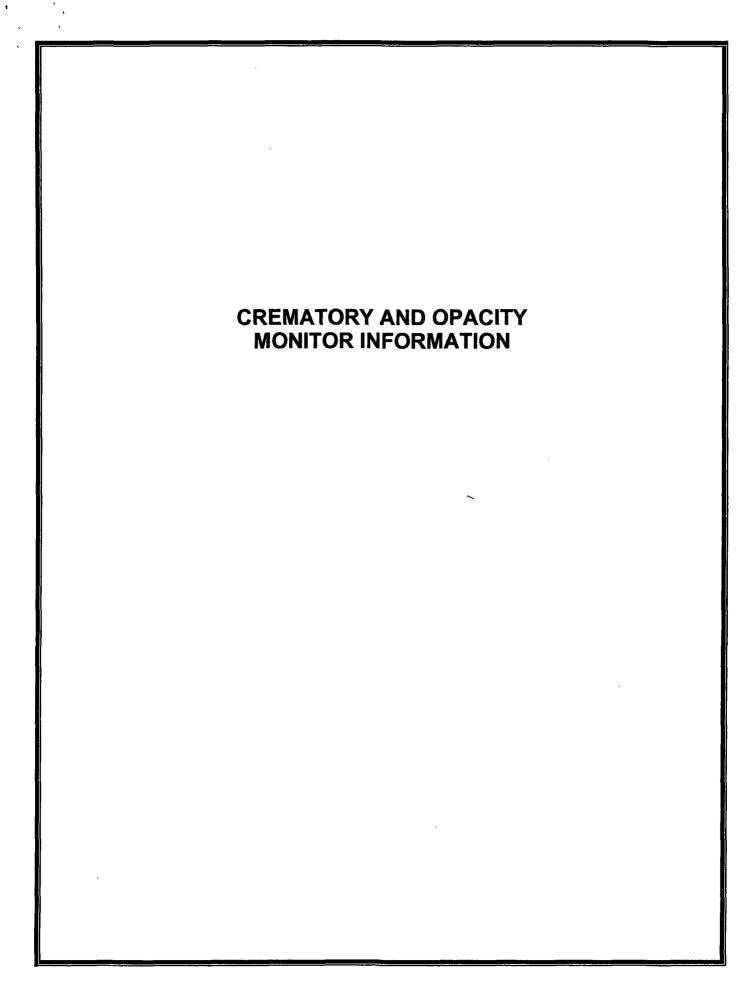




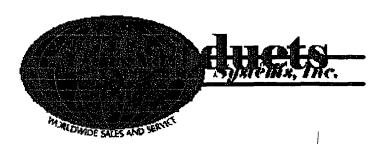

Human Cremation

Below is the information about our N20 Series cremation retorts.

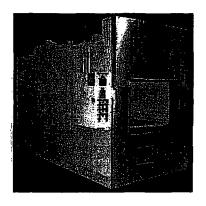

N20 - Specifications

Dimensions: Height 8'-6" Width 5'-6" Length 12'-0"

Weight: 24,000 lbs.

Power Requirments: 220V, 1 Phase, 30 AMPS 110V, 1 Phase, 10 AMPS


Gas Pressure: Natural Gas 7" W.C. Propane Gas 11" W.C.

Cremation Rate: 150 lbs/hour

Burner Output:

Maximum Input Rating 1,500,000 BTU's per hour Afterburner Maximum 1,000,000 BTU's per hour (Full Modulation 100%)
Ignition Burner 300,000 BTU's per hour Cremation Burner 500,000 BTU's per hour

Air Requirements: Outside air inlet louvers in the room located at or below burner height, capable of passing 2,500 CFM of free

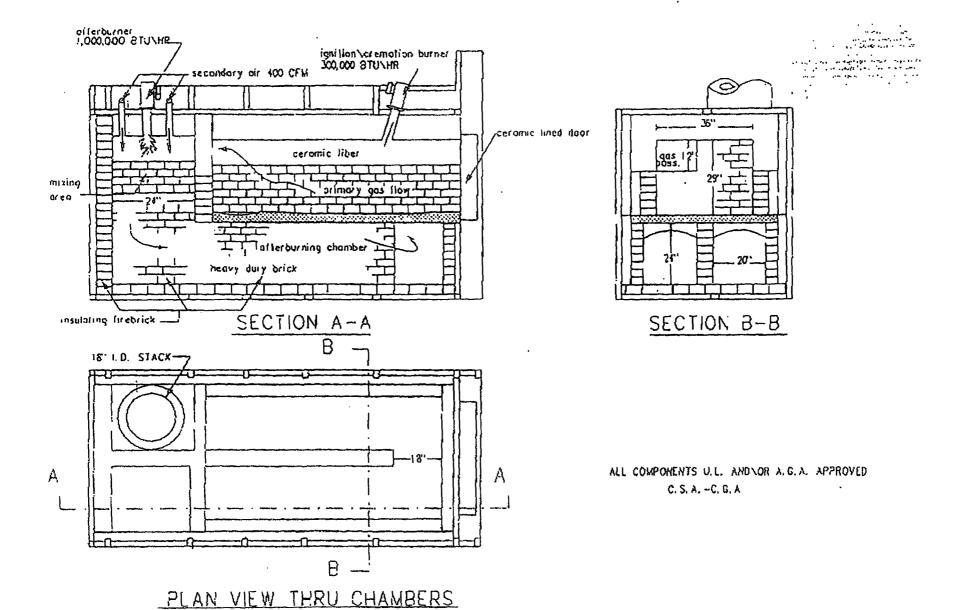

N20 CREMATOR

B&L CREMATION SYSTEMS, INC.GENERAL PURPOSE OPACITY MONITOR

SPECIFICATIONS

LIGHT SOURCE: Pulsed visible LED

SPECTRAL RESPONSE: Between 400nm and 500 nm

ANGLE OF VIEW: Less than 4 degrees from axis

AMBIENT LIGHT: No measurable efect

MAXIMUM DISTANCE BETWEEN MONITOR AND REFLECTOR: 6 feet

MONITOR TYPE: Retro reflective using a 3" reflector

ADJUSTMENT RANGE: 0 TO 100% opacity

ACCURACY: +/- 3% of full scale

POWER: 24 VAC, less than 10 VA

OUTPUT: Relay, DPDT, 5.0 A @ 102 VAC

LED Indicator for sensitivity adjustment

TEMPERATURE: Storage, -7 degrees to 32 degrees C

Operating: -29 degrees to 66 degrees C

PHYSICAL: 8.000"H x 5.750"W x 3.375"D

ENCLOSURE: Meets NEMA 3, 4 and 12 specs



OPACITY MONITOR ADJUSTMENT PROCEDURE

The following procedure may be necessary to be performed from time to tome due to vibration on the top of the retort. This procedure is designed to be both simple and quick, and to insure the proper operation of your retort.

It is suggested that before starting, this procedure be carefully read, and if you have any questions, call the service department at B&L Cremation Systems. A service technician will be happy to answer any questions or assist you with the alignment/adjustment of your opacity monitor.

The best time to perform this procedure is on a cool retort.

Please check the cleanliness of the opacity monitor lens and reflector. Inspect the reflector for any damage, replacing it as necessary.

You will need the following tools. 6" adjustable wrench 7/16" wrench A Phillips screwdriver A small straight slot screwdriver 6' to 8' stepladder

- Step 1. Open the electrical cabinet located on your retort. Inside, locate the "C1 BLOWER" contractor. At the bottom of the contactor, from left to right, you will see a red "STOP" button. To the right of this is a blue "RESET" button. Above this is a "TEST" slot (see fig. 1).
- Step 2. Turn on the retort with the main timer set to zero. The "Cool Down" lamp should be illuminated.
- Step 4. Next, it will be necessary to get on top of the retort. Inspect the opacity monitor, locating the red alignment L.E.D. and the sensitivity adjustment (see fig. 2). The red L.E.D. should be lit, and by passing your hand in front of the lens you should be able to hear the opacity monitor click. If you are experiencing minor nuisance tripping of the opacity system, turn the sensitivity adjustment CLOCKWISE approximately 1/8 turn. This should correct the problem. Now press the round blue "RESET" button located on the "C1 BLOWER" contactor in the electrical cabinet. Your retort is now ready to operate. If, however, the red L.E.D. is not illuminated or you do not hear the clicking when you pass your hand in front of the monitor, proceed to step 5.
- Step 5: Turn the sensitivity adjustment FULLY CLOCKWISE. Loosen the two mounting bolts hold the opacity monitor. By slowly moving the opacity monitor (left or right, forward or backward), obtain the maximum brightness possible for the L.E.D. Carefully tighten one of the mounting bolts, using shims as necessary, then snug the remaining bolt. Do NOT tighten this bolt. Turn the sensitivity adjustment COUNTERCLOCKWISE until the monitor clicks. Turn the sensitivity adjustment CLOCKWISE until you hear the monitor click again, then continue CLOCKWISE an additional 1/8 turn. The opacity monitor is now correctly set. Press the round blue "RESET" button on the C1 BLOWER contactor, completing the alignment procedure. Please note: if the circuit board is black counterclockwise and clockwise are reversed. Counterclockwise will be clockwise and clockwise will be counterclockwise.

If the L.E.D. does not illuminate, or if the monitor does not click, please contact the service department at B&L Cremations Systems to further assist you.



OPACITY MONITOR ADJUSTMENT PROCEEDURE

FIGURE L'CLBLOWER"


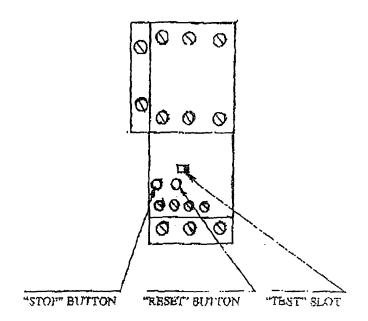


FIGURE 2, OPACITY MONITOR




PAGE 2

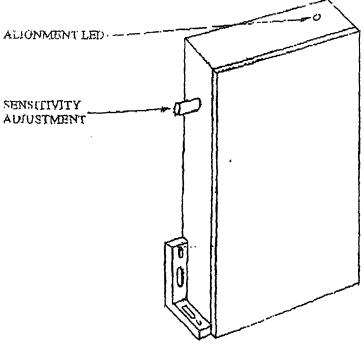

7205 114TH Avenue North • Largo, Florida 33773 1-800-622-5411 • 727-541-4666 • Facsimile 727-547-0669

TEMPERATURE CONTROL SEQUENCE

A type "K" thermocouple is placed 19-20 ft³ downstream of the afterburner flame tip to measure temperature. The downstream distance is determined based on residence time calculations. The temperature signal is sent to the main control panel where it is received by a FUJI PYZ series temperature controller with a digital readout and a Honeywell DR4200 temperature recorder. The temperature controller controls the temperature via a motorized butterfly valve located on the afterburner inlet gas assembly. Gas demand is controlled to maintain a steady temperature. The ignition/cremation burner is interlocked to the afterburner temperature by the temperature controller set point. Combustion cannot start until temperature set point is reached. Alarm contacts in the temperature controller are utilized for over (high) temperature conditions. 100° F over set point the afterburner will be in maximum low fire and the ignition/cremation burner will shut off. The butterfly valve located on the secondary air inlet is controlled by a separate temperature output to add air to cool the system. At set point the unit will return to normal operation. An optimonitor smoke detector is placed on the stack and set at 10% opacity. If emissions occur the alarm will sound, a visual red warning lamp located on the control panel will illuminate and the primary burners will shut off. The excess air butterfly valve will open to add air to the secondary chamber to oxidize the emissions. After a five (5) minute period the unit will revert to normal operations.

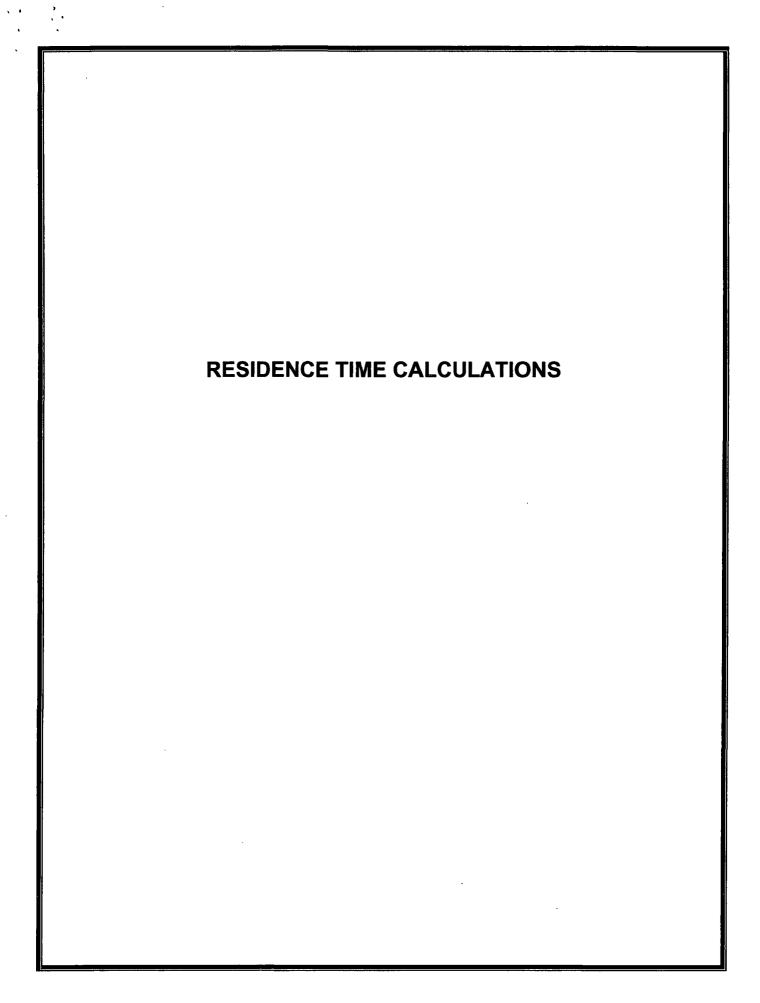

CALCULATIONS FOR PRODUCTS OF COMBUSTION AND RESIDENCE TIME FOR B & L CREMATION SYSTEMS N20 SERIES, LPG FIRED, 150 LB/HR, TYPE IV WASTE, HUMAN CREMATORY

A. BASIS: 1 LB WASTE

- 1. <u>1 lb waste x 1000 Btu/lb waste</u> = 1.5 lbs air 10,000 Btu / 15 lb air
- 2. $\underline{1 \text{ lb waste x 0.10 lb combustible}}$ = 0.10 lbs of combustibles lb waste
- 3. <u>1 lb waste x 0.85 lb H20 x 1.6⁽¹⁾</u> = 1.36 lbs of water lb waste
- 4. $\underline{6500 \text{ Btu aux fuel}^{(2)} \times 23.8 \text{ft}^3 \text{ air/ft}^3 \text{ fuel}}_{2550 \text{ Btu/ft}^3 \text{ fuel}} = 4.54 \text{ lb of air for aux fuel}_{2550 \text{ Btu/ft}^3 \text{ fuel}} \times 13.35 \text{ ft}^3 \text{ air/lb air}_{@70^{\circ}\text{F}}$
- 5. <u>6500 Btu aux fuel x 0.044 lb fuel/ft³ fuel</u> = 0.11 lb of aux. fuel 2550 Btu/ft³ fuel
- 6. Sum = PRODUCTS OF COMBUSTION (POC) = 7.61 LBS POC PER
 LB OF WASTE @ 70 °F

B. RESIDENCE TIME @ 1800 °F

7.61lb POC/lb waste x 56.93 ft³/lb POC @1800 °F x 150 lb waste/hr 3600 sec/hr


- = 18 ft³/sec @1800 °F
- = 18 ft³ for 1 second residence time

Thermocouple placement at: 20 ft³

Secondary chamber operating temperature \geq 1600 °F

Correction multiplier for dry air and water vapor Fuel is natural gas

References: Incinerator Institute of America
North American Combustion Handbook

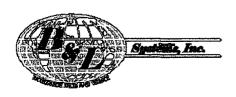

AIR GENERAL PERMIT REGISTRATION

TRAHAN FAMILY FUNERAL HOME AND CREMATORY

HUMAN CREMATORY

SES Reference No. 09P230

Prepared For:

TRAHAN FAMILY FUNERAL HOME


AND CREMATORY
430 Beverly Parkway
Pensacola, Florida 32505

Prepared By:


SOUTHERN ENVIRONMENTAL

SCIENCES, INC.

1204 North Wheeler Street Plant City, Florida 33566

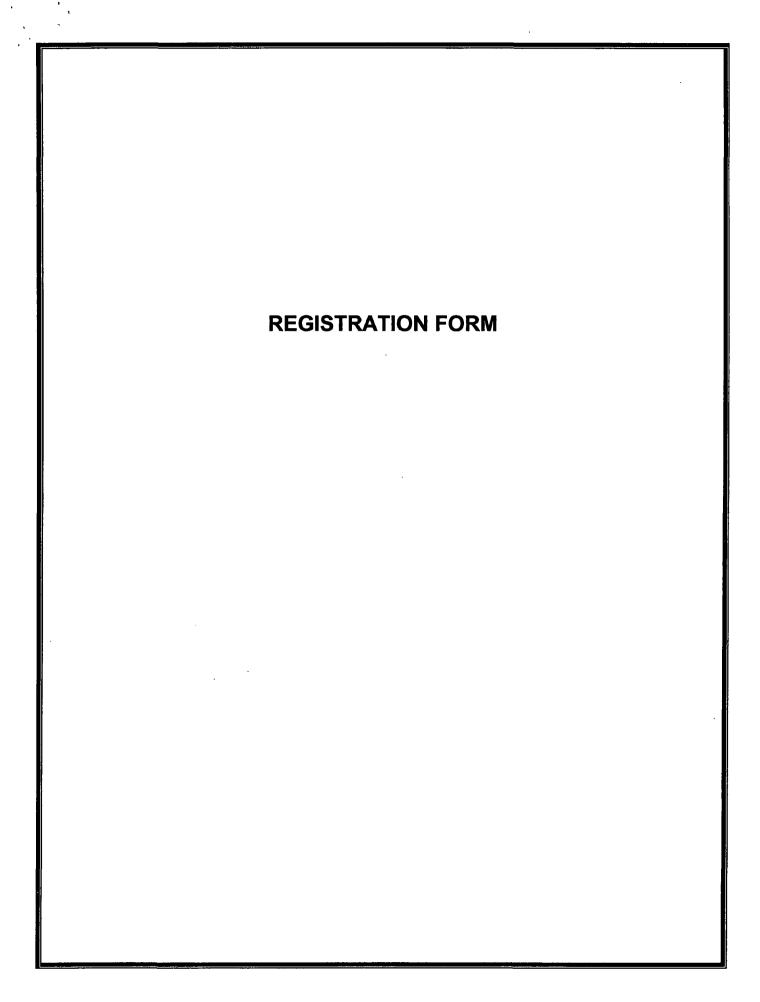

Trahan Family Funeral Home P.O. Box 17008 Pensacola, Florida 32522

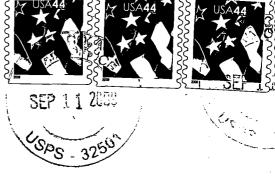

Florida Department of Environmental Protection Receipts
P.O. Box 3070
Tallahassee, Florida 32315-3070