HUMAN CREMATORY
AIR GENERAL PERMIT REGISTRATION FORM

Part II. Notification to Permitting Office
(Detach and submit to appropriate permitting office; keep copy onsite)

Instructions: To give notice to the Department of an eligible facility's intent to use this air general in the owner or operator of the facility must detach and complete this part of the Air General III. permit, the owner or operator of the facility must detach and complete this part of the Air General Permit Registration Form and submit it to the appropriate Department of Environmental Protection or local air pollution control program office which has permitting authority. Please type or print clearly all information, and enclose the appropriate air general permit registration processing fee pursuant to Rule 62-4.050(4)(0), F.A.C. (\$100 as of the effective date of this form)

Registration Type Check one: INITIAL REGISTRATION - Notification of intent to: Construct and operate a proposed new facility. Operate an existing facility not currently using an air general permit (e.g., a facility proposing to go from an air operation permit to an air general permit). **RE-REGISTRATION** (for facilities currently using an air general permit) - Notification of intent to: Continue operating the facility after expiration of the current term of air general permit use. Continue operating the facility after a change of ownership. Make an equipment change requiring re-registration pursuant to Rule 62-210.310(2)(e), F.A.C., or any other change not considered an administrative correction under Rule 62-210.310(2)(d), F.A.C. Surrender of Existing Air Operation Permit(s) - For Initial Registrations Only If the facility currently holds one or more air operation permits, such permit(s) must be surrendered by the owner or operator upon the effective date of this air general permit. In such case, check the first box, and indicate the operation permits being surrendered. If no air operation permits are held by the facility, check the second box. All existing air operation permits for this facility are hereby surrendered upon the effective date of this air general permit; specifically permit number(s): No air operation permits currently exist for this facility. General Facility Information Facility Owner/Company Name (Name of corporation, agency, or individual owner who or which owns, leases, operates, controls, or supervises the facility.) **MERRITT FUNERAL HOME** Site Name (Name, if any, of the facility site; e.g., Plant A, Metropolis Plant, etc. If more than one facility is owned, a registration form must be completed for each.) **BROOKSVILLE** Facility Location (Provide the physical location of the facility, not necessarily the mailing address.) Street Address: 2 SOUTH LEMON STREET City: BROOKSVILLE County: **HERNANDO** Zip Code: **34601** Facility Start-Up Date (Estimated start-up date of proposed new facility.) (N/A for existing facility) 9/31/08


DEP Form No. 62-210.920(2)(c) Effective: January 10, 2007

Owner/Authorized Representa	tive	
		y, certifies that the facility is eligible to use this
air general permit.)	who, by transfer and remine early	is engine to assume
Print Name and Title: <b>DAVID M</b>	FRRITT PRESIDENT	
Trint Name and Trite. DAVID III	ERRIT, I REOIDENT	
Owner/Authorized Representative		
Organization/Firm: MERRITT F		
Street Address: 2 SOUTH LEM	ON STREET	
City:BROOKSVILLE	County: HERNANDO	Zip Code: <b>34601</b>
Owner/Authorized Representative	e Telephone Numbers	
Telephone: <b>352-796-6699</b>	F	ax: <b>352-754-8818</b>
Cell phone (optional):		
Facility Contact (If different fr		
		d regarding day-to-day operations at the facility.)
Print Name and Title:SAME AS	ABOVE	
Facility Contact Mailing Address	<u> </u>	
Organization/Firm:		
Street Address:	_	
City:	County:	Zip Code:
Facility Contact Telephone Num	bers	
Telephone:	F	ax:
Cell phone (optional):		
	<u> </u>	
Owner/Authorized Representa	tive Statement	
		ove as owner or authorized representative
_		ve of the owner or operator of the facility
		nereby certify, based on information and
		essed in this registration form is eligible for
		n this registration form are true, accurate
		facility described in this registration form so
		pollutant emissions found in the statutes of
		nental Protection and revisions thereof.
ine Braie of Frontia and Fare		normal 1 / escenters what contains the cog.
I will promptly notify the De	epartment of any changes to the	information contained in this registration
form.	,	
$\int_{-\infty}^{\infty}$	<u>,</u>	
11/-10	)_	, /
Naccott- H	<del>1</del> 72	2/9/09
Signature		Date
ľ		

DEP Form No. 62-210.920(2)(c) Effective: January 10, 2007

Design Calculations
If this is an initial registration for a proposed new human crematory unit, provide design calculations to confirm a sufficient volume in the secondary chamber combustion zone to provide for at least a 1.0 second gas residence time at 1800 degrees F.
Manufacturer's' design calculations attached.
Registration is not for proposed new human crematory unit(s).
Description of Facility
Below, or as an attachment to this form, provide a description of all crematory operations at the facility in sufficient detail to demonstrate the facility's eligibility for use of this air general permit and to provide a basis for tracking any future equipment or process changes at the facility. Describe all air pollutant-emitting processes and equipment at the facility, and identify any air pollution control measures or equipment used.
This application is for installation of a new B&L Cremations Systems, Inc. Phoenix series 150 lb/hr human crematory incinerator.
The crematory is designed to burn human remains at the average incineration rate of 150 pounds per hour. The incinerator consists of primary and secondary (afterburner) chambers, each fired exclusively on LPG with a design heat input rate of 0.35 MMBTU/hr. Primary chamber, 1.0 MMBTU/hr. Secondary chamber.
Emissions are controlled by the afterburner, which will maintain a minimum secondary chamber combustion zone temperature of 1600 Deg F prior to and during combustion of material in the primary chamber. The secondary chamber is designed to insure one-second residence time at a gas temperature of 1800 Deg F, and is equipped with a continuous temperature monitor and recorder.
The unit is equipped with an opacity monitor that adjusts the cremation process if excess opacity is measured. Opacity monitor information is attached.

DEP Form No. 62-210.920(2)(c) Effective: January 10, 2007

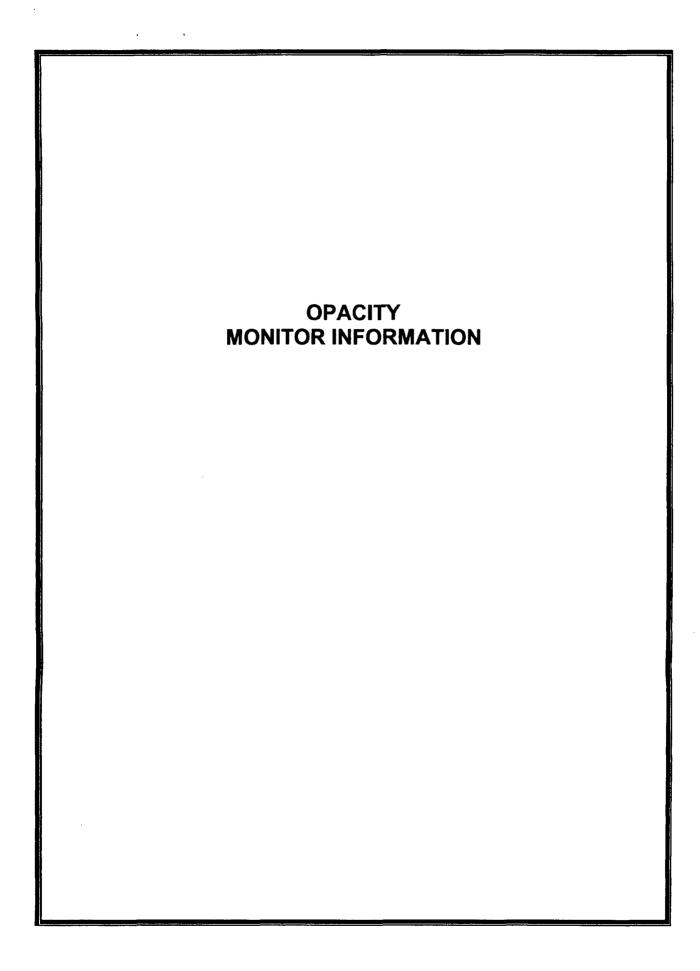

#### **B&L CREMATION SYSTEMS, INC.**

#### GENERAL PURPOSE OPACITY MONITOR

#### **SPECIFICATIONS**

LIGHT SOURCE: Pulsed visible LED

SPECTRAL RESPONSE: Between 400nm and 500 nm

ANGLE OF VIEW: Less than 4 degrees from axis

AMBIENT LIGHT: No measurable efect

MAXIMUM DISTANCE BETWEEN MONITOR AND REFLECTOR: 6 feet

MONITOR TYPE: Retro reflective using a 3" reflector

ADJUSTMENT RANGE: 0 TO 100% opacity

ACCURACY: +/- 3% of full scale

POWER: 24 VAC, less than 10 VA

OUTPUT: Relay, DPDT, 5.0 A @ 102 VAC

LED Indicator for sensitivity adjustment

TEMPERATURE: Storage, -7 degrees to 32 degrees C

Operating: -29 degrees to 66 degrees C

PHYSICAL: 8.000"H x 5.750"W x 3.375"D

ENCLOSURE: Meets NEMA 3, 4 and 12 specs



#### OPACITY MONITOR ADJUSTMENT PROCEDURE

The following procedure may be necessary to be performed from time to tome due to vibration on the top of the retort. This procedure is designed to be both simple and quick, and to insure the proper operation of your retort.

It is suggested that before starting, this procedure be carefully read, and if you have any questions, call the service department at B&L Cremation Systems. A service technician will be happy to answer any questions or assist you with the alignment/adjustment of your opacity monitor.

The best time to perform this procedure is on a cool retort.

Please check the cleanliness of the opacity monitor lens and reflector. Inspect the reflector for any damage, replacing it as necessary.

You will need the following tools. 6" adjustable wrench 7/16" wrench A Phillips screwdriver A small straight slot screwdriver 6' to 8' stepladder

- Step 1. Open the electrical cabinet located on your retort. Inside, locate the "C1 BLOWER" contractor. At the bottom of the contactor, from left to right, you will see a red "STOP" button. To the right of this is a blue "RESET" button. Above this is a "TEST" slot (see fig. 1).
- Step 2. Turn on the retort with the main timer set to zero. The "Cool Down" lamp should be illuminated.
- Step 4. Next, it will be necessary to get on top of the retort. Inspect the opacity monitor, locating the red alignment L.E.D. and the sensitivity adjustment (see fig. 2). The red L.E.D. should be lit, and by passing your hand in front of the lens you should be able to hear the opacity monitor click. If you are experiencing minor nuisance tripping of the opacity system, turn the sensitivity adjustment CLOCKWISE approximately 1/8 turn. This should correct the problem. Now press the round blue "RESET" button located on the "C1 BLOWER" contactor in the electrical cabinet. Your retort is now ready to operate. If, however, the red L.E.D. is not illuminated or you do not hear the clicking when you pass your hand in front of the monitor, proceed to step 5.
- Step 5: Turn the sensitivity adjustment FULLY CLOCKWISE. Loosen the two mounting bolts hold the opacity monitor. By slowly moving the opacity monitor (left or right, forward or backward), obtain the maximum brightness possible for the L.E.D. Carefully tighten one of the mounting bolts, using shims as necessary, then snug the remaining bolt. Do NOT tighten this bolt. Turn the sensitivity adjustment COUNTERCLOCKWISE until the monitor clicks. Turn the sensitivity adjustment CLOCKWISE until you hear the monitor click again, then continue CLOCKWISE an additional 1/8 turn. The opacity monitor is now correctly set. Press the round blue "RESET" button on the C1 BLOWER contactor, completing the alignment procedure. Please note: if the circuit board is black, counterclockwise and clockwise are reversed. Counterclockwise will be clockwise and clockwise will be counterclockwise.

If the L.E.D. does not illuminate, or if the monitor does not click, please contact the service department at B&L Cremations Systems to further assist you.



### OPACITY MONITOR AIMUSTMENT PROCEEDURE

FIGURE L'CLBLOWER"


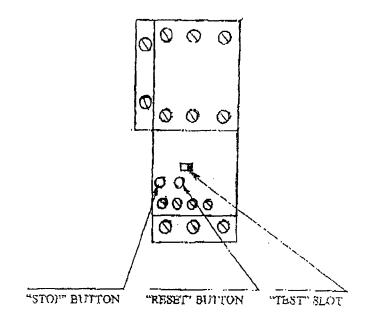


FIGURE 2, OPACITY MONITOR




PAGE 2

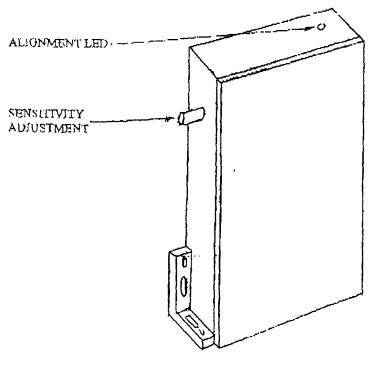

7205 114<sup>TH</sup> Avenue North • Largo, Florida 33773 1-800-622-5411 • 727-541-4666 • Facsimile 727-547-0669

#### TEMPERATURE CONTROL SEQUENCE

A type "K" thermocouple is placed 19-20 ft<sup>3</sup> downstream of the afterburner flame tip to measure temperature. The downstream distance is determined based on residence time calculations. The temperature signal is sent to the main control panel where it is received by a FUJI PYZ series temperature controller with a digital readout and a Honeywell DR4200 temperature recorder. The temperature controller controls the temperature via a motorized butterfly valve located on the afterburner inlet gas assembly. Gas demand is controlled to maintain a steady temperature. The ignition/cremation burner is interlocked to the afterburner temperature by the temperature controller set point. Combustion cannot start until temperature set point is reached. Alarm contacts in the temperature controller are utilized for over (high) temperature conditions. 100° F over set point the afterburner will be in maximum low fire and the ignition/cremation burner will shut off. The butterfly valve located on the secondary air inlet is controlled by a separate temperature output to add air to cool the system. At set point the unit will return to normal operation. An optimonitor smoke detector is placed on the stack and set at 10% opacity. If emissions occur the alarm will sound, a visual red warning lamp located on the control panel will illuminate and the primary burners will shut off. The excess air butterfly valve will open to add air to the secondary chamber to oxidize the emissions. After a five (5) minute period the unit will revert to normal operations.

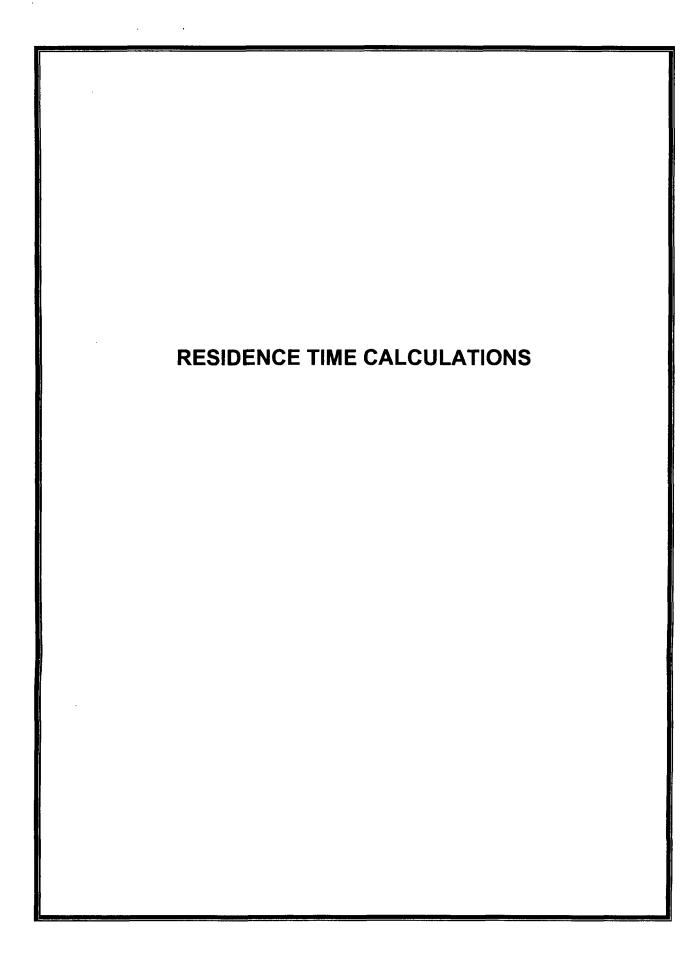

# CALCULATIONS FOR PRODUCTS OF COMBUSTION AND RESIDENCE TIME FOR B & L CREMATION SYSTEMS PHEONIX SERIES, LPG FIRED, 150 LB/HR, TYPE IV WASTE, HUMAN CREMATORY

#### A. BASIS: 1 LB WASTE

- 1. <u>1 lb waste x 1000 Btu/lb waste</u> = 1.5 lbs air 10,000 Btu / 15 lb air
- 2. <u>1 lb waste x 0.10 lb combustible</u> = 0.10 lbs of combustibles lb waste
- 3. <u>1 lb waste x 0.85 lb H20 x 1.6<sup>(1)</sup></u> = 1.36 lbs of water lb waste
- 4.  $\underline{6500 \text{ Btu aux fuel}^{(2)} \times 23.8 \text{ft}^3 \text{ air/ft}^3 \text{ fuel}}_{2550 \text{ Btu/ft}^3 \text{ fuel}} = 4.54 \text{ lb of air for aux fuel}$
- 5. <u>6500 Btu aux fuel x 0.044 lb fuel/ft<sup>3</sup> fuel</u> = 0.11 lb of aux. fuel 2550 Btu/ft<sup>3</sup> fuel
- 6. Sum = PRODUCTS OF COMBUSTION (POC) = 7.61 LBS POC PER
  LB OF WASTE @ 70 °F

#### B. RESIDENCE TIME @ 1800 °F

7.61lb POC/lb waste x 56.93 ft<sup>3</sup>/lb POC @1800 °F x 150 lb waste/hr 3600 sec/hr

- $= 18.1 \text{ ft}^3/\text{sec } @1800 \text{ °F}$
- = 18.1 ft<sup>3</sup> for 1 second residence time

Thermocouple placement at: 19 ft<sup>3</sup>

Secondary chamber operating temperature > 1600 °F

- (1) Correction multiplier for dry air and water vapor
- (2) Fuel is propane

References: Incinerator Institute of America
North American Combustion Handbook



## AIR GENERAL PERMIT REGISTRATION MERRITT FUNERAL HOME

**HUMAN CREMATORY** 

SES Reference No. 08P256

Prepared For:

MERRITT FUNERAL HOME


2 South Lemon Street Brooksville, Florida 34601

Prepared By:

SOUTHERN ENVIRONMENTAL


SCIENCES, INC.

1204 North Wheeler Street Plant City, Florida 33566

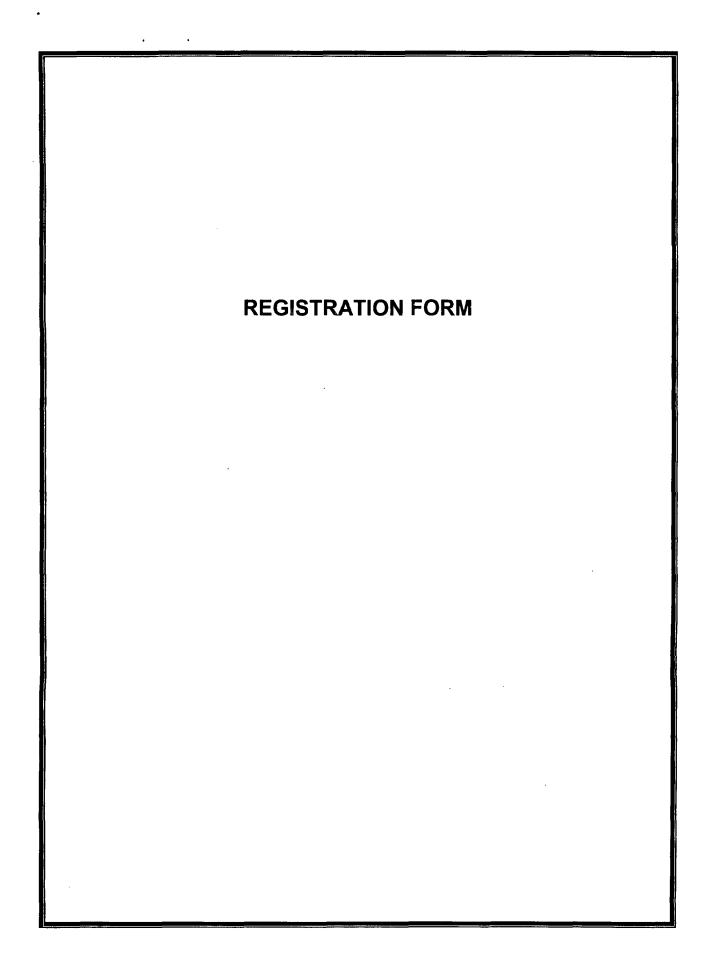

## Merritt FUNERAL HOME

2 South Lemon Avenue • Brooksville, FL 34601

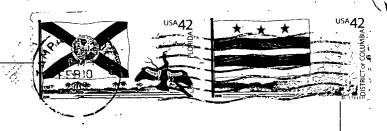

Florida Department of Environmental Protection P.O. Box 3070 Tallahassee, FL 32315-3070

Family Owned and Operated